



You're home.™

1 year
guarantee

Spray & Vac Window Cleaner Range

Let's get started



H86-WV Series

vax.co.uk

Let's talk safety



Basic safety precautions

This Spray & Vac is intended for household use only and NOT for commercial or industrial use.

- When using the Spray & Vac basic safety precautions should always be observed, including the following
- Keep fingers, hair and loose clothing from moving parts and openings whilst using the Spray & Vac
- This appliance can be used by children aged 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they

have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance.

Cleaning and user maintenance shall not be made by children without supervision

- Only Vax recommend charger, accessories and solution should be used with this Spray & Vac

Please keep instructions for future reference and use the Spray & Vac only as instructed in this guide



Don'ts

This Spray & Vac is intended for indoor use only and NOT for outdoor use.

- ✗ Don't use this Spray & Vac if it has been dropped, damaged, immersed in water or left outdoors
- ✗ Don't unplug the Spray & Vac or pull the Spray & Vac by the charger cord. Don't use the charger cord as a handle, pull the charger cord around corners or sharp edges or close a door over the charger cord
- ✗ Don't charge the Spray & Vac if the Charger cord or plug is damaged. Please contact our Customer Care Line
- ✗ Don't use the Spray & Vac charger with incorrect voltage as this may result in damage or injury to the user. The correct voltage is listed on the ratings label

✗ Don't handle the plug or use the Spray & Vac with wet hands

✗ Don't use the Spray & Vac whilst connected to the charger unit

✗ Don't throw the Spray & Vac into fire or expose to high temperatures, as the Spray & Vac contains a rechargeable battery which may cause damage or burst. Never dismantle the battery or replace with a different type

✗ Don't attempt to remove blockages with sharp objects as this may cause damage to your Spray & Vac

✗ Don't vacuum up hot coals, cigarette butts, matches or smoking hot burning items or use in an area where there may be harmful fluids (chlorine, bleach, and ammonia drain cleaner)



Do's

- ✓ Only use the Spray & Vac indoors on vertical surfaces
- ✓ Always make sure water container are fitted correctly before using your Spray & Vac
- ✓ Turn off all controls on the Spray & Vac before disconnecting or connecting the charger
- ✓ Always switch off the Spray & Vac and disconnect the charger before carrying out any maintenance
- ✓ Always replace the fuse in the plug with a British 13amp fuse. Always protect the charger cable from heated surfaces or near open flames

✓ Use only CE approved 13amp extension cords, non-approved extension cords may overheat

✓ Always charge the Spray & Vac indoors

✓ Always carry the Spray & Vac by the handle

✓ Store your Spray & Vac in a cool, dry area away from children

✓ Only use Vax recommended batteries and solution

Thank you for buying this Spray & Vac

Taking care of your windows

The Spray & Vac Window Cleaner is designed to clean windows regularly as effectively and efficiently as possible and this user guide will help you get the most out of your machine.

Clean windows look better and make your home brighter.

Taking care of your Spray & Vac

Also inside this guide are instructions on maintaining your new machine, so that it's always ready when you are to tackle your windows.

Taking care of you

We're here if you need us. Instead of taking me back to the shop, simply visit:

vax.co.uk/support or call:

(UK) **0844 412 8455** (ROI) 1-800 928 308

Monday-Friday 8.30am to 6.30pm, Saturday 9.00am to 5.00pm

Calls are charged at the UK local rate. Please make a note of the serial number and model number of the window vacuum before calling.

Alternatively, you can write to us at:

Vax Ltd., Kingswood Road, Hampton Lovett, Droitwich, Worcestershire, WR9 0QH, UK



You're home.™



Let us know what you think **@VaxUK**

Contents

Let's talk safety

Getting to know your machine

Getting started

Using your machine

Taking care of your machine

 
Notes

What to do if it goes wrong


Getting in touch

Spray & Vac

Included with your machine



Charger

 

Microfibre pad



Scrub pad



Funnel

Getting to know your machine

Suction head

Suction head release button

Power On/Off button

Handle

Power charger
indicator light

Power charger
connector

Removable squeegee

Lower squeegee

Fastening strip

Solution spray outlet

Spray trigger

Solution tank

Dirty water tank

Exhaust vent

Tank release buttons

Dirty water
release cap

Technical Specification

Name **Spray & Vac**

Voltage **3.7V**

Weight **0.8kg**

Run time **30 minutes**

Charge time **3 hours**

Battery Type **Lithium-ion**

Battery capacity **1500mAh**

Charger Model **KSA34A0550060VKD**

Charger input **100-240v 50/60hz 0.15A**

Charger output **5.5V==0.6A**

Subject to technical change without notice.

Accessories & Consumables

Microfibre pads (Type 1)*

1-1-133091-00

Scrub pads (Type 2)*

1-1-133092-00

Glass cleaner concentrate 500ml*


1-9-132547-00

*To purchase consumables and accessories, please visit vax.co.uk

Getting started

PLEASE READ 'LET'S TALK SAFETY' AT THE BEGINNING BEFORE USE


Assembling your window vacuum

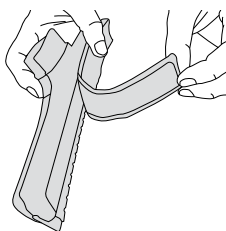

Choose microfibre/scrub pad and push onto the fastening strip



Insert the suction head into the machine and push until it clicks into place

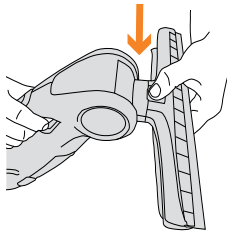


To remove the suction head, press the suction head release button and gently pull




Note: The microfibre pad is for general cleaning and the scrub pad for cleaning stubborn marks

Using your machine


Using your window vacuum

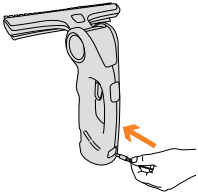


Insert the charger cable into the power charger connector. Plug the charger into the mains. Power charger indicator light will flash during charging, when fully charged the indicator light will show solid red. The Spray & Vac will need to charge for 2 hours

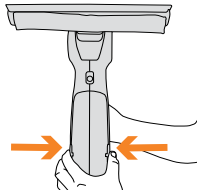


Squeeze the tank release buttons to remove the tank from the window vacuum

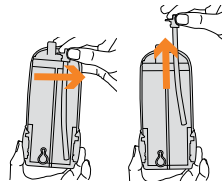


Turn the lid of the cleaning solution tube anticlockwise and lift to remove

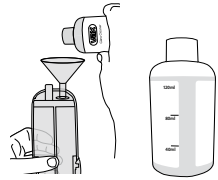


Pour 40ml of Vax window solution into the cleaning solution side of the dual tank, using the funnel

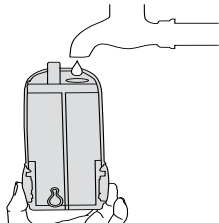


Top up with water (Max 35°C) to MAX line on solution side of the dual tank and turn the cap clockwise to close

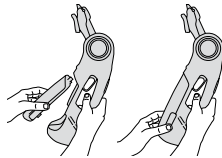

To attach the dual tank back onto the unit, insert top first and gently push the bottom until it fastens into place

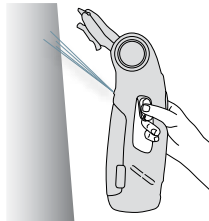


Pull the trigger to spray solution onto the surface to be cleaned

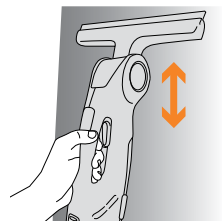


Wipe/scrub the surface with the microfibre or scrub pad on the suction head


Note: You may need to press the trigger a few times first before solution is dispensed, this clears air from the system

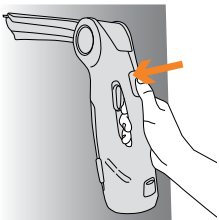

Turn the Spray & Vac on using the power on/off button

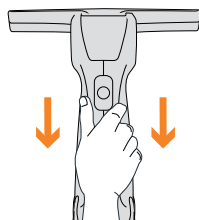

Vacuum up the water using slow, straight strokes

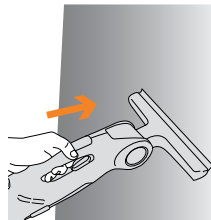


When you reach the bottom of the window, apply pressure and the suction head will pivot


Taking care of your machine

Note: The Spray & Vac must be emptied after each use – DON'T store water/solution in the machine between usage


After every use

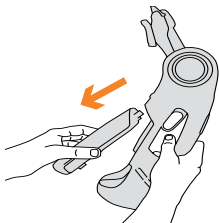

Squeeze the tank release buttons to remove the tank from the Spray & Vac

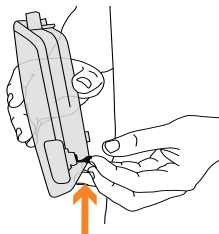


Lift the emptying cap to let the dirty water out of the tank

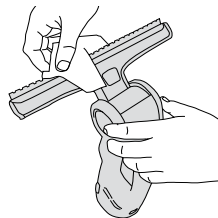


Wipe the squeegee with a damp cloth to remove any excess water


Cleaning the removable squeegee

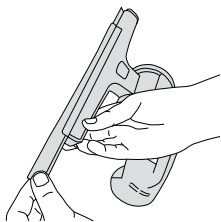

To remove the squeegee, pull and slide through the suction head

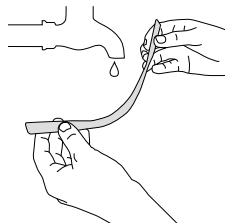

Wash the squeegee under running water (Max 40°C) to remove dirt and debris. Let it dry

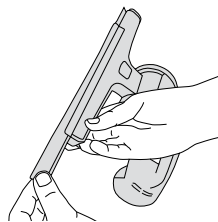

To attach the squeegee push and slide through the suction head



What to do if it goes wrong

Problem

Solution

Why won't the window vacuum turn on?

- The battery may not be charged. Connect the charger, the indicator light will flash red when charging and show a solid red light when fully charged. The initial charge should be for 2 hours.
- The unit might be plugged in. The window vacuum will not run when the charger is plugged in

Why won't the window vacuum pick up?

- The squeegee blade may be blocked, remove from the machine, rinse and clear any dirt/debris
- The window vacuum may be low on charge, plug the window vacuum in to recharge
- The dual tank may be full, empty the dual tank

Why does my window vacuum leak?

- You may be using the window vacuum on a flat, horizontally surface, only use the window vacuum on vertical surfaces
- The dual tank may be full, empty the dual tank

Why does my window vacuum leave a smear on my window?

- The squeegee blade is dirty, detach and clean. Go to 'Taking care of your machine' page 8

Why won't the battery recharge?

- The charger may not be inserted correctly
- Check the mains power is switched on
- The electrical outlet may not be working. Check the fuse in the plug, always replace with a British 13amp fuse

Warning: Always turn off and unplug the Spray and Vac before carrying out and maintenance/troubleshooting checks

It's quick and easy to
register for your **FREE**

**1 year
guarantee**

Online at: **vax.co.uk/guarantees**

Please retain your original receipt for proof of purchase.

we're here if you need us

Online **vax.co.uk/support**

Call: (UK) **0844 412 8455** (ROI) 1-800 928 308

Monday-Friday 8.30am to 6.30pm, Saturday 9.00am to 5.00pm *

Alternatively, you can write to us at:

Vax Ltd., Kingswood Road, Hampton Lovett, Droitwich, Worcestershire, WR9 0QH, UK



You're home.™



@VaxUK

Vax Ltd., Kingswood Road, Hampton Lovett, Droitwich, Worcestershire, WR9 0QH, UK
email: info@vax.co.uk website: vax.co.uk

Version 1.0



EEC Statement of Compliance: Manufacturer/EEC importer: Vax Limited, hereby on our own responsibility, declare that the H86-WV series is manufactured in compliance with the following Directives:
Safety: 2006/95/EC Low Voltage Directive. **EMC:** 2004/108/EC Electromagnetic Compatibility Directive.



Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist.
Check with your Local Authority or retailer for recycling advice.